




DE | EN |

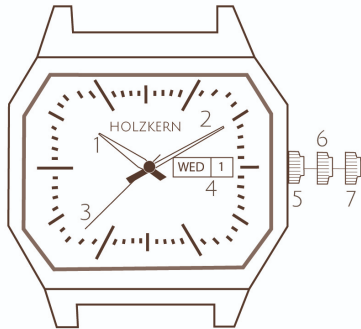


- 1 Hour | Stunde
- 2 Minute | Minute
- 3 Second | Sekunde
- 4 Date | Datum
- 5 Normal position | Normalposition
- 6 1st click | 1. Position
- 7 2nd click | 2. Position

| | |
|--|---|
| <p>Battery Batterie SR621SW</p> <p>Movement Uhrwerk Quartz movement Quarzuhrwerk Citizen-Miyota GM02</p> <p>Water resistance Wassersäule Splash-proof Spritzwasserfest</p> <p>Glass Glas Mineral crystal Mineralglas</p> <p>Case thickness Gehäusehöhe 8,2 mm</p> <p>Weight Gewicht 74 g</p> <p>Caseback Rückseite Gehäuse Metal Metall</p> | <p>Circumference Umfang Adjustable length Größenverstellbar</p> <p>Band width Armbandbreite 18 mm</p> <p>Band Armband Metal, wood Metall, Holz</p> |
|--|---|

| | |
|---|--|
| Instructions Band Anleitung Armband Instrucciones para la correa Istruzioni per il cinturino Instructions pour le bracelet Instructies Horlogeband Instruktioner rem | |
| EN: www.holzkern.com/en/faq/#size | FR: www.holzkern.com/fr/faq/#size |
| DE: www.holzkern.com/de/faq/#size | NL: www.holzkern.com/nl/faq/#size |
| ES: www.holzkern.com/es/faq/#size | DA: www.holzkern.com/da/faq/#size |
| IT: www.holzkern.com/it/faq/#size | |

| | | | | | |
|--|---|------------------------|--|--|--------------------|
| | Accuracy/Month Genauigkeit/Monat | ± 20 sec. ± 20 Sek. | | Battery life Batterie Lebensdauer | 2 Years 2 Jahre |
|--|---|------------------------|--|--|--------------------|

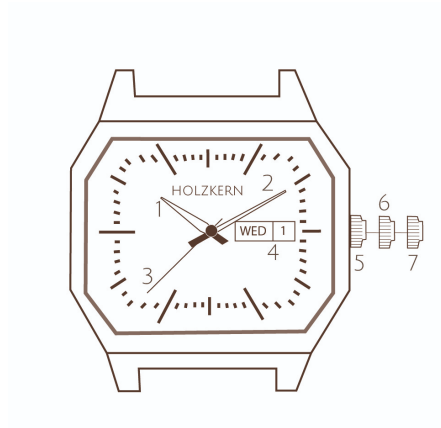

- 1 Hour | Stunde
- 2 Minute | Minute
- 3 Second | Sekunde
- 4 Date | Datum
- 5 Normal position | Normalposition
- 6 1st click | 1. Position
- 7 2nd click | 2. Position

Setting time and date

Drag the crown to position 1 and turn it counter-clockwise to set the correct date. Turn the crown clockwise to set the day of the week. You can choose between English and Spanish*. Drag the crown to position 2 and turn it to set the correct time. After the time and date have been set, push the crown back to position 1.

**Don't set the date between 21:00 and 04:00 (the date may not change the next day).*

Datum und Uhrzeit einstellen

Ziehe die Krone in Position 1, durch Drehen gegen den Uhrzeigersinn stellst Du das korrekte Datum ein. Drehe die Krone im Uhrzeigersinn, um den Wochentag einzustellen. Hier kann zwischen Englisch und Spanisch gewählt werden*. Ziehe die Krone in Position 2, durch Drehen stellst Du die korrekte Uhrzeit ein. Nachdem Uhrzeit und Datum eingestellt sind, drücke die Krone zurück in Position 1.

**Stelle das Datum nicht zwischen 21:00 und 04:00 Uhr ein (das Datum stellt sich sonst am nächsten Tag nicht richtig um).*



Accuracy/Month
Genauigkeit/Monat

± 20 sec.
± 20 Sek.



Battery life
Batterie Lebensdauer

2 Years
2 Jahre



HOLZKERN

NATURAL ART

36X41 MM