

- 1** Hour | Stunde
- 2** Minute | Minute
- 3** Second | Sekunde
- 4** Stopwatch minutes | Stoppuhr Minuten
- 5** Stopwatch seconds | Stoppuhr Sekunden
- 6** 24-hour hand | 24-Stundenzeiger
- 7** Date | Datum
- 8** Normal position | Normalposition
- 9** Time setting | Zeiteinstellung
- 10** 1st click | 1. Position
- A** Button A | Taste A | stop | Start
- B** Button B | Taste B | reset | Rücksetzung

Battery | Batterie

SR621SW

Movement | Uhrwerk

Citizen-Miyota JS25

Case thickness | Gehäusehöhe

12 mm

Circumference | Umfang

Adjustable length | Größenverstellbar

Weight | Gewicht

192 g

Glass | Glas

Hardened mineral crystal | Mineralglas

Backplate | Rückseite Gehäuse

Metal | Metall

Water resistance | Wassersäule

Splash-proof | Spritzwasserfest

Band width | Armbandbreite

24 mm

Band | Armband

 Metal, wood | Metall, Holz
 Screws | Schrauben

Setting the time and date

You can adjust the time by turning the crown in position two.

In position one you can adjust the date by turning the crown counterclockwise.

**Don't set the date between 21:00 and 01:00 (the date may not change the next day).*

Uhrzeit und Datum einstellen

Du kannst an der 2x herausgezogenen Krone durch Drehen die korrekte Uhrzeit einstellen. Bei 1x herausgezogener Krone kannst du durch Drehen gegen den Uhrzeigersinn das Datum einstellen.

**Stelle das Datum nicht zwischen 21:00 und 01:00 Uhr ein (das Datum stellt sich sonst am nächsten Tag nicht richtig um).*

**Instructions Band
 Anleitung Armband**


 EN: www.holzkern.com/en/faq/#size

 DE: www.holzkern.com/de/faq/#size


Accuracy/Month ± 20 sec.
Genauigkeit/Monat ± 20 Sek.



Battery life 2 Years
Batterie Lebensdauer 2 Jahre

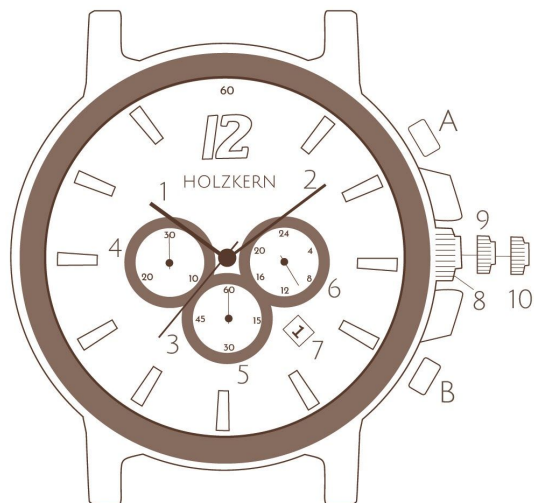

- 1** Hour | Stunde
- 2** Minute | Minute
- 3** Second | Sekunde
- 4** Stopwatch minutes | Stoppuhr Minuten
- 5** Stopwatch seconds | Stoppuhr Sekunden
- 6** 24-hour hand | 24-Stundenzeiger
- 7** Date | Datum
- 8** Normal position | Normalposition
- 9** Time setting | Zeiteinstellung
- 10** 1st click | 1. Position
- A** Button A | Taste A | stop | Start
- B** Button B | Taste B | reset | Rücksetzung

Battery | Batterie

SR621SW

Movement | Uhrwerk

Citizen-Miyota JS25

Case thickness | Gehäusehöhe

12 mm

Circumference | Umfang

Adjustable length | Größenverstellbar

Weight | Gewicht

192 g

Glass | Glas

Hardened mineral crystal | Mineralglas

Backplate | Rückseite Gehäuse

Metal | Metall

Water resistance | Wassersäule

Splash-proof | Spritzwasserfest

Band width | Armbandbreite

24 mm

Band | Armband

 Metal, wood | Metall, Holz
 Screws | Schrauben

Stopwatch

This watch includes a stopwatch function which you can start and stop by pressing button A, and reset with button B.

You can adjust the second hand when using the stopwatch function by pulling the crown out two clicks (until the watch stops), then use buttons A and B to adjust the hand.

Stoppuhr

In diesem Modell ist eine Stoppuhr integriert, welche sich mit der Taste A starten und anhalten und mit der Taste B zurückstellen lässt.

Den Sekundenzeiger der Stoppuhr kannst du einstellen, indem du die Krone 2x herausziehst bis die Uhr komplett stillsteht. Nun kannst du mit den beiden Tasten A und B den Zeiger verstellen.

Instructions Band
Anleitung Armband

 EN: www.holz kern.com/en/faq/#size

 DE: www.holz kern.com/de/faq/#size

Accuracy/Month ± 20 sec.
Genauigkeit/Monat ± 20 Sek.

Battery life 2 Years
Batterie Lebensdauer 2 Jahre