




HOLZKERN

CROSS COUNTRY | WALDLAUF

45 MM

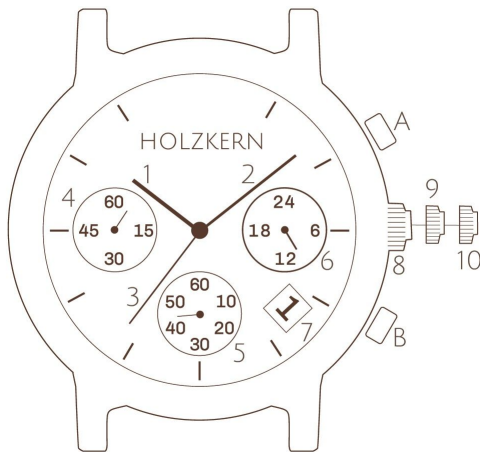

- 1** Hour | Stunde
- 2** Minute | Minute
- 3** Second | Sekunde
- 4** Stopwatch minutes | Stoppuhr Minuten
- 5** Stopwatch seconds | Stoppuhr Sekunden
- 6** 24-hour hand | 24-Stundenzeiger
- 7** Date | Datum
- 8** Normal position | Normalposition
- 9** 1st click | 1. Position
- 10** 2nd click: time setting | 2 Position: Zeiteinstellung
- A** Button A | Taste A | stop | Start
- B** Button B | Taste B | reset | Rücksetzung

Battery | Batterie

SR626SW

Movement | Uhrwerk

Seiko VD53

Case thickness | Gehäusehöhe

11 mm

Circumference | Umfang

Adjustable length | Größenverstellbar

Weight | Gewicht

64,5 g

Glass | Glas

Hardened mineral crystal | Mineralglas

Backplate | Rückseite Gehäuse

Metal | Metall

Water resistance | Wassersäule

Splash-proof | Spritzwasserfest

Band width | Armbandbreite

22 mm

Band | Armband

Wood | Holz

Screws | Schrauben

Stopwatch

This watch includes a stopwatch function which you can start and stop by pressing button A, and reset with button B.

You can adjust the second hand when using the stopwatch function by pulling the crown out two clicks (until the clock stops), then use buttons A and B to adjust the hand.

Stoppuhr

In diesem Modell ist eine Stoppuhr integriert, welche sich mit der Taste A starten und anhalten und mit der Taste B zurückstellen lässt.

Den Sekundenzeiger der Stoppuhr kannst du einstellen, indem du die Krone 2x herausziehst bis die Uhr komplett stillsteht. Nun kannst du mit den beiden Tasten A und B den Zeiger verstellen.

**Instructions Band
Anleitung Armband**

EN: www.holzkern.com/en/faq/#size

DE: www.holzkern.com/de/faq/#size



Accuracy/Month ± 20 sec.
Genauigkeit/Monat ± 20 Sek.



Battery life 2 Years
Batterie Lebensdauer 2 Jahre