




DE | EN |

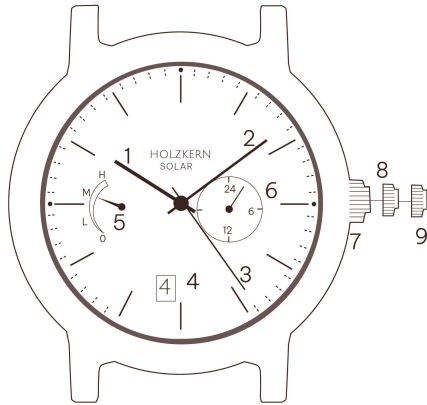

- 1 Hour | Stunde
- 2 Minute | Minute
- 3 Second | Sekunde
- 4 Date | Datum
- 5 Battery indicator | Akkuanzeige
- 6 24-hour hand | 24-Stundenzeiger
- 7 Normal position | Normalposition
- 8 1st click | 1. Position
- 9 2nd click | 2. Position

<p>Movement Uhrwerk Solar movement Solaruhrwerk Seiko VS57</p> <p>Water resistance Wassersäule Splash-proof Spritzwasserfest</p> <p>Glass Glas Mineral crystal Mineralglas</p> <p>Caseback Rückseite Gehäuse Metal Metall</p>	<p>Circumference Umfang 220 - 170 mm</p> <p>Band width Armbandbreite 22 mm</p> <p>Band Armband Leather Leder</p> <p>Closure Verschluss tang buckle Schnallenverschluss</p>
---	--

FAQ

EN: www.holzkern.com/en/faq/#size
 DE: www.holzkern.com/de/faq/#size
 ES: www.holzkern.com/es/faq/#size
 IT: www.holzkern.com/it/faq/#size

FR: www.holzkern.com/fr/faq/#size
 NL: www.holzkern.com/nl/faq/#size
 DA: www.holzkern.com/da/faq/#size




Accuracy/Month
Genauigkeit/Monat

± 20 sec.
± 20 Sek.



Running time
Laufzeit

max. 4 Month |
fully charged
max. 4 Monate |
voller Akku

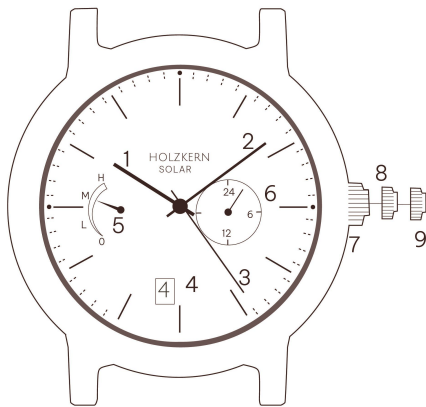

- 1 Hour | Stunde
- 2 Minute | Minute
- 3 Second | Sekunde
- 4 Date | Datum
- 5 Battery indicator | Akkuanzeige
- 6 24-hour hand | 24-Stundenzeiger
- 7 Normal position | Normalposition
- 8 1st click | 1. Position
- 9 2nd click | 2. Position

Solar watch

Before commissioning your solar-powered watch, it must be exposed to five hours of sunlight. Especially during the sunless months, it should be powered under a lamp (distance 20cm) for 60 hours (glow-lamp 30W/LED 6W/375 Lumen) to fully charge the power reserve. Be careful not to expose the watch to excessive heat (bright midday sun) to prevent damage.

Battery indicator:

- H** 90 days or more
- M** 30-90 days
- L** 30 days or less
- 0** notice for charging*

The 4h button can be used to adjust the battery indicator if it is misaligned. Pull the crown to position 2 and press the 4h button until the display shows 0. Then press the same button repeatedly until the hand is in the desired position. Then gently push the crown back into the case.

*The second hand starts moving at two-second intervals if the stored energy is on an extremely low level. In that case, recharge the watch as already described.

Setting the time and date

You can adjust the time by turning the crown in position two. In position one you can adjust the date by turning the crown counterclockwise.

*Don't set the date between 21:00 and 01:00 (the date may not change the next day).



Accuracy/Month
Genauigkeit/Monat

± 20 sec.
± 20 Sek.




Running time
Laufzeit

max. 4 Month |
fully charged
max. 4 Monate |
voller Akku



DE | EN |

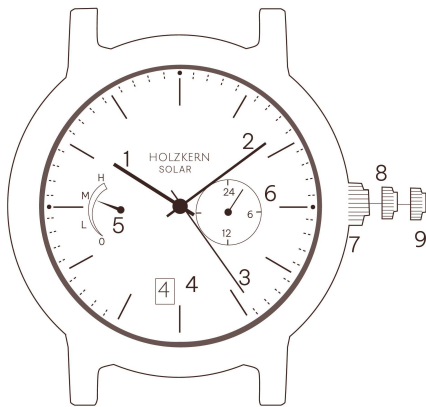

- 1 Hour | Stunde
- 2 Minute | Minute
- 3 Second | Sekunde
- 4 Date | Datum
- 5 Battery indicator | Akkuanzeige
- 6 24-hour hand | 24-Stundenzeiger
- 7 Normal position | Normalposition
- 8 1st click | 1. Position
- 9 2nd click | 2. Position

Solar Uhr

Vor der Inbetriebnahme muss deine Solaruhr fünf Stunden purem Sonnenlicht ausgesetzt sein. Besonders in den sonnenarmen Monaten sollte die Uhr aber unter einer Lampe (20cm Abstand) für 60 Stunden aufgeladen werden (Glühlampe 30W/LED 6W/375 Lumen). Beachte dabei, die Uhr keiner übermäßigen Hitze (z.B. pralle Mittagssonne) auszusetzen, um Schäden zu vermeiden.

Akkuanzeige:

- H** 90 Tage oder mehr
- M** 30-90 Tage
- L** 30 Tage oder weniger
- O** Uhr sollte geladen werden Laden*

Mit der 4h-Taste kann die Batterieanzeige eingestellt werden, wenn sie falsch ausgerichtet ist. Ziehe dafür die Krone in Position 2. Drücke die 4h Taste bis die Anzeige auf 0 geht. Drücke dann dieselbe Taste wiederholt, bis der Zeiger in der gewünschten Position ist und drücke die Krone im Anschluss sanft ins Gehäuse.

*Der Sekundenzeiger beginnt sich in Zwei-Sekunden-Intervallen zu bewegen, wenn die gespeicherte Energie auf einem extrem niedrigen Niveau ist. Laden Sie die Uhr in diesem Fall so schnell wie möglich wie bereits beschrieben auf.

Uhrzeit und Datum einstellen

Du kannst an der 2x herausgezogenen Krone durch Drehen die korrekte Uhrzeit einstellen. Bei 1x herausgezogener Krone kannst du durch Drehen gegen den Uhrzeigersinn das Datum einstellen.

*Stelle das Datum nicht zwischen 21:00 und 01:00 Uhr ein (das Datum stellt sich sonst am nächsten Tag nicht richtig um).

**Accuracy/Month**
Genauigkeit/Monat± 20 sec.
± 20 Sek.**Running time**
Laufzeitmax. 4 Month |
fully charged
max. 4 Monate |
voller Akku